




Detail 05.02.07 Rev. 12/16/18

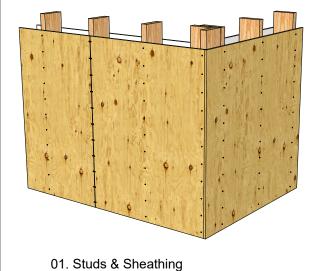


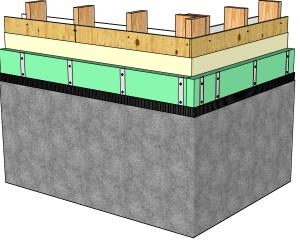


02. Air barrier, insulation, drainage material

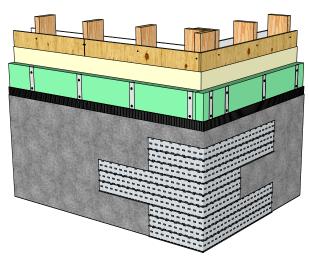


03. Notch and bend patented grid panels around corner; stagger 16" min.

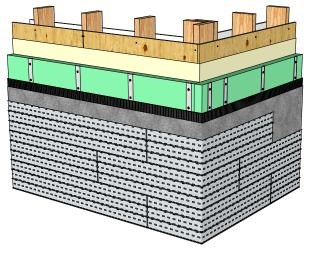

04. Patented grid panel, stagger 16"

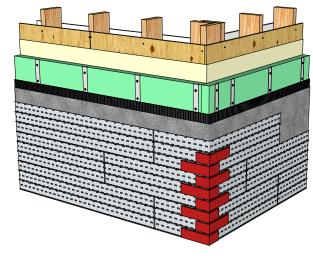

05. Install special corner brick pieces

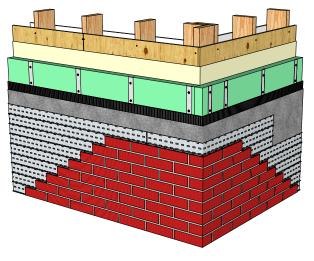

06. Install real thin brick

CIS Exterior Wall, Wood Stud Backing | Base of Wall Sequencing Detail 05.02.07 Rev. 12/16/18